
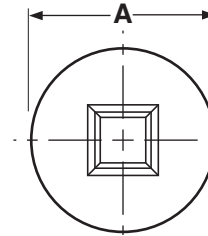


Wood Screws

Head Dimensions

Flat Square Recess

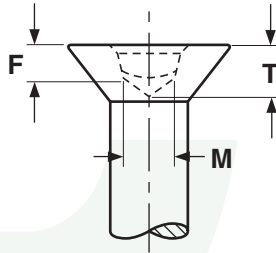

SQUARE SOCKET FLAT HEADS

Nominal Size or Basic Screw Diameter		A		H	M	T	F		Driver Size
		Head Diameter		Head Height	Recess Square	Recess Depth	Recess Penetration Gaging Depth		
		Max	Min	Ref	Ref	Ref	Max	Min	
6	.1380	.262	.238	.083	.090	.096	.055	.040	1
8	.1640	.312	.285	.100	.111	.115	.063	.048	2
9	.1770	.358	.316	.108	.111	.127	.075	.060	2
10	.1900	.362	.333	.116	.111	.127	.075	.060	2
12	.2160	.412	.380	.132	.1315	.158	.095	.080	3

This type of recess has a square center opening, slightly tapered side walls and a conical bottom.